


# MODEL 6200

## BIG HEAT

### DELUXE PORTABLE ELECTRIC HEATER

1500-1200 Watts / Fan-forced


No portable 120V heater can give you more heat.

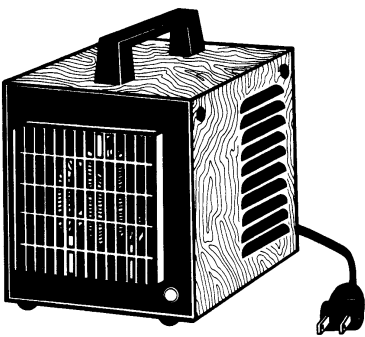

# READ AND SAVE THESE INSTRUCTIONS

## FEATURES

- Full 1500 watts of heating power
- Plus 1200 watts for economy
- "Fan-only" setting for summer use
- Fan-forced for even circulation
- Thermostat automatically holds comfort level you select
- Reliable long-life coil-type heating element
- Deluxe chrome finish grille
- Sturdy steel case
- Durable woodgrain vinyl finish
- Light, small, easy to move about
- Safety features include:  
Tip over switch and Overheat protector
- Simple, 2-knob control
- 6' cord with safety flanged plug

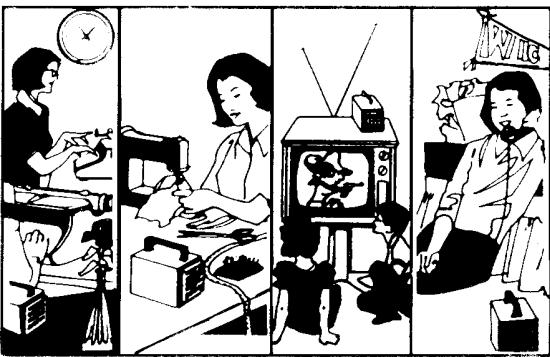

## Take it wherever you need instant heat

- |               |                       |
|---------------|-----------------------|
| • Den         | • Recreation Vehicles |
| • Family Room | • College Dorm        |
| • Workshop    | • Office              |
| • Bedroom     | • Living Room         |
| • Garage      | • Nursery             |

## SAFETY WARNINGS

**When using electrical appliances, basic precautions should always be followed to reduce risk of fire, electric shock, and injury to persons, including the following:**

1. Read all instructions before using this heater.
2. Avoid obstructing airflow openings: Clean dust from grille and side openings periodically. If blocked in any manner, the overheat protector will automatically shut the heater off.
3. Do not operate heater when no one is present.
4. This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. Use handle when moving this heater. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet from the front of the heater and keep them away from the sides and rear.
5. Extreme caution is necessary when any heater is used by or near children or invalids and whenever the heater is left operating and unattended.
6. Always unplug heater when not in use.
7. Do not operate any heater with a damaged cord or plug or after the heater malfunctions, has been dropped or damaged in any manner. Return heater to authorized service facility for examination, electrical or mechanical adjustment, or repair.
8. Do not use outdoors.
9. This heater is not intended for use in bathrooms, laundry areas and similar indoor locations. Never locate heater where it may fall into a bathtub or other water container.
10. Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or the like. Arrange cord away from traffic area and where it will not be tripped over.
11. To disconnect heater, turn controls to off, then remove plug from outlet.
12. Do not insert or allow foreign objects to enter any ventilation, exhaust opening as this may cause an electric shock, fire, or damage to the heater.
13. To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, when openings may become blocked.

*(more "SAFETY WARNINGS" on back)*

## SAFETY WARNINGS (CONTINUED)

- 14. A heater has hot and arcing or sparking parts inside. Do not use it in areas where gasoline, paint, or flammable liquids are used or stored.
- 15. Use this heater only as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
- 16. Disconnect cord before cleaning or servicing.
- 17. Store in safe location where heater cannot fall or be damaged.
- 18. Avoid the use of an extension cord. The extension cord may overheat and cause a risk of fire. However, if you must use an extension cord, the cord shall be No. 14 AWG minimum size and rated not less than 1500 watts.
- 19. Do not place the heater near a bed because objects such as pillows or blankets can fall off the bed and be ignited by the heater.

## OPERATING INSTRUCTIONS

- 1. Place heater on any firm surface - tabletop, counter, desk, shelf or floor. Avoid soft or combustible materials such as carpet.
- 2. Plug cord into any 120V, 60Hz AC wall outlet.
- 3. Turn left knob to desired setting: fan only, low heat (1200W), or high heat (1500W).
- 4. Use "High" setting for fast warm-up.
- 5. Turn right knob to set thermostat at desired warmth. Adjust setting so heater shuts off just as room reaches desired warmth.
- 6. Once room is warmed up, you will save electricity and maintain more even heat by moving left-hand knob to "Low" setting.

### "TIP-OVER" SWITCH

This heater has a built-in switch that automatically shuts off the heater if it is tipped onto its front or back.

### OVERHEAT THERMOSTAT

This heater also has a built-in thermostat that automatically shuts off the heater if the grille becomes blocked and/or any overheating condition occurs. To reset: Disconnect the power, remove the cause of the overheating and let heater cool down. Then reconnect heater to power and turn it back on.

## UNEVEN GLOWING

The heating element may glow unevenly. This is caused by a number of factors, including:

- uneven and turbulent air currents across the heating element.
- small differences in coil to coil spacing.

This is no cause for concern. Uneven glowing does not create an unsafe condition, does not affect the amount of heat being given off or the life of the heating element.

## WARRANTY

### MANUFACTURER ONE YEAR LIMITED WARRANTY

Manufacturer warrants to the original consumer purchaser of its products that such products will be free from defects in materials or workmanship for a period of one year from the date of original purchase. THERE ARE NO OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. During this one-year period, Manufacturer will, at its option, repair or replace, without charge, any product or part which is found to be defective under normal use and service. THIS WARRANTY DOES NOT EXTEND TO FLUORESCENT LAMP STARTERS AND TUBES. This warranty does not cover (a) normal maintenance and service or (b) any products or parts which have been subject to misuse, negligence, accident, improper maintenance or repair (other than by Manufacturer), faulty installation or installation contrary to recommended installation instructions. The duration of any implied warranty is limited to the one-year period as specified for the express warranty. Some states do not allow limitation on how long an implied warranty lasts, so the above limitation may not apply to you. MANUFACTURER'S OBLIGATION TO REPAIR OR REPLACE, AT MANUFACTURER'S OPTION, SHALL BE THE PURCHASER'S SOLE AND EXCLUSIVE REMEDY UNDER THIS WARRANTY. MANUFACTURER SHALL NOT BE LIABLE FOR INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES ARISING OUT OF OR IN CONNECTION WITH PRODUCT USE OR PERFORMANCE. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state. This warranty supersedes all prior warranties. To qualify for warranty service, you must (a) notify Manufacturer at the address stated below or telephone: 1-800-637-1453, (b) give the model number and part identification and (c) describe the nature of any defect in the product or part. At the time of requesting warranty service, you must present evidence of the original purchase date.

BIG HEAT, Union, IL 60180